
Hiti P510L

User Manual

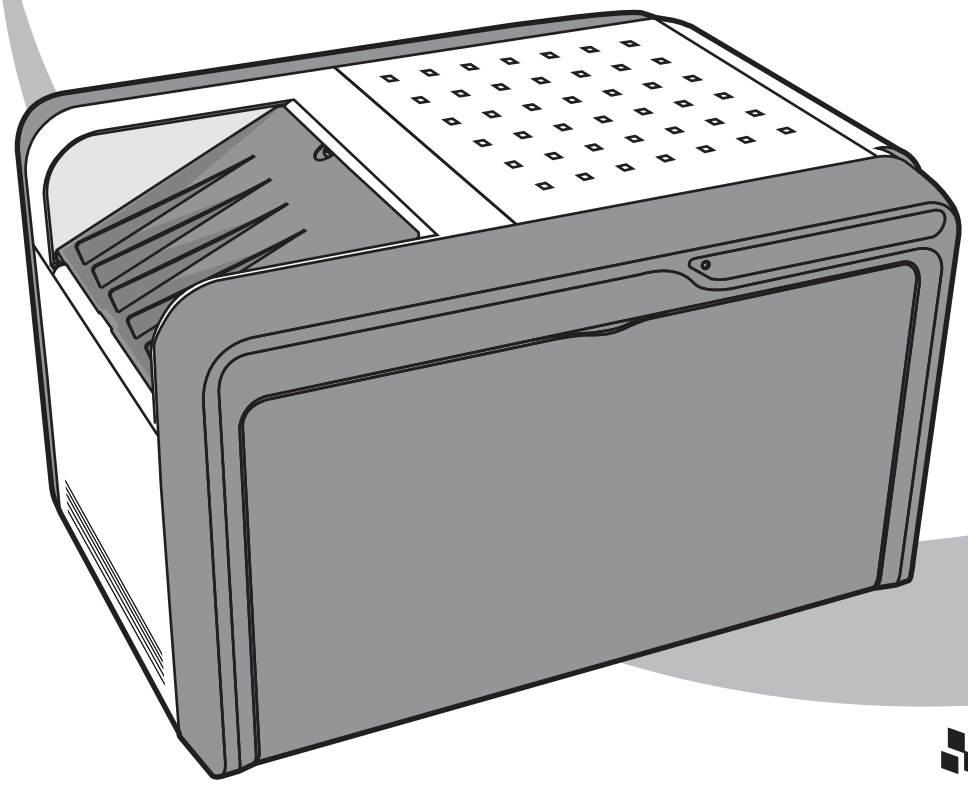

Hiti Digital, Inc.
www.hiti.com

General Information

Copyrights

All rights reserved. The information contained in this user's manual is subject to change without notice. Hiti Digital Inc. makes no warranty with regard to the material, including, but not limited to, the implied warranties of merchant-ability and fitness for a particular purpose. Hiti Digital Inc. will not liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, perf ormance, or use of the material.

Safety Precautions

1. Never attempt to disassemble for modify the printer. Doing so may lead to electric shock or malfunction.
2. Do not allow liquids near the printer, which may lead to electric shock or fire.
3. Do not use the printer if the printer body is damaged.
4. Avoid plugging in the printer into a jack being used by couple appliances.
5. Do not put the printer on an unstable cart, stand, or table.
6. Make sure the printer is operated under the type of power indicated on the marking label. If you are not sure the type of power, please consult your dealer or local power company for detail.
7. Do not block air vents protecting the printer from overheating.
8. Do not disable the safety purpose of grounding type plug. Use the power supply cord only in combination with an earthed socket-outlet.
9. The socket-outlet shall be installed near the equipment and shall be easily accessible.
10. The equipment shall be used at maximum 40°C ambient temperature.
11. An approved power cord greater or equal (e.g. H03VV-F (for EUT weight 3kg), H05VV-F (for EUT weight > 3kg), 2X or 3G, 0.75mm2) must be used.

FCC Notice

Do not make any changes or modifications to the equipment unless specified in the instruction. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1.Reorient or relocate the receiving antenna.
2.Increase the separation between the equipment and receiver.
3.Never push objects into this equipment through cabinet openings, which may touch dangerous voltage points or short out parts that could lead to a fire or electric shock.
4.Never spill liquid on this equipment.
5.Connect the device into an outlet on a circuit difference from that to which the receiver is connected.

Trademarks

Microsoft, MS-DOS, and Windows are registered trademarks of Microsoft Corporation. Adobe and Acrobat are registered trademarks of Adobe Systems Incorporated. Mac, Macintosh, and Mac OS are trademarks of Apple Computer, Inc., registered in the U.S. and other countries. Pentium is a U.S. trademark of Intel Corporation. All other trademarks or registered trademarks are properties of their respective companies.

English

Table of Content

1. Checking Package Contents

2. Getting the Latest Update

3. Introduction of Printer

- Top
- Front
- Rear
- Sides

4. Making Printer Ready to Print

- Installing the ribbon cartridge
- Installing the paper box
  a.Assembling the paper roll and flange
  b.Putting the paper roll into paper box
  c.Inserting the paper box to the printer
- Powering up the printer

5. PC-Link Printing

- System requirement
- Connecting the printer to a PC
- Installing the printer driver

6. Photo Finishing By PC-Link Printing

7. Specification

Checking Package Contents



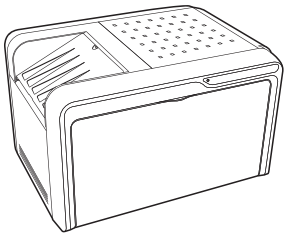



Photo Printer
Hiti P510L

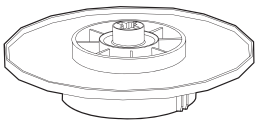


Flange x2




Spacer x2

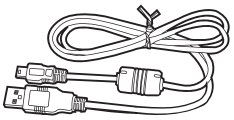


USB Cable



Power Cord

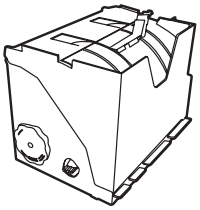

Paper Box



P510L Bonus CD

Note

1. If something missed from the package, please contact your local dealer or Hiti service center nearest to you.
2. Paper roll spacer is NECESSARY only for 5x7 size paper roll installation.
3. Consumables are EXCLUDED.


Getting the Latest Update

Hiti Digital Inc. website provides the latest driver, application, user's manual, printer firmware, and so on for users to download. Please visit our website at www.hiti.com for more information.


Any questions toward Hiti product(s), please contact your local service center for detail.

Introduction of Printer


Top

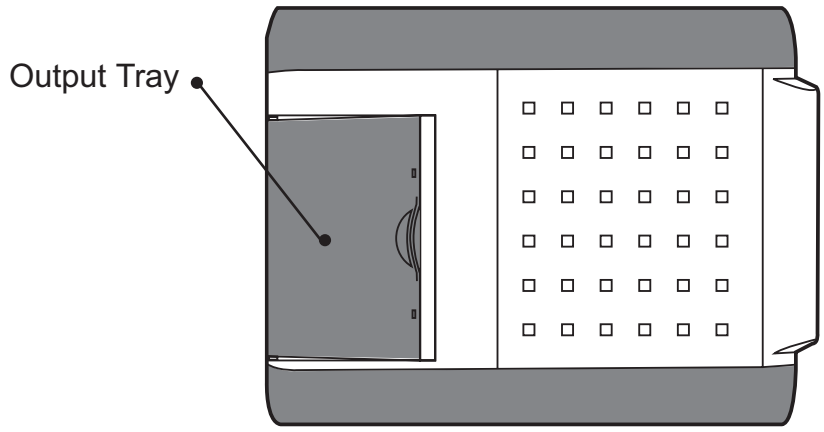


Front

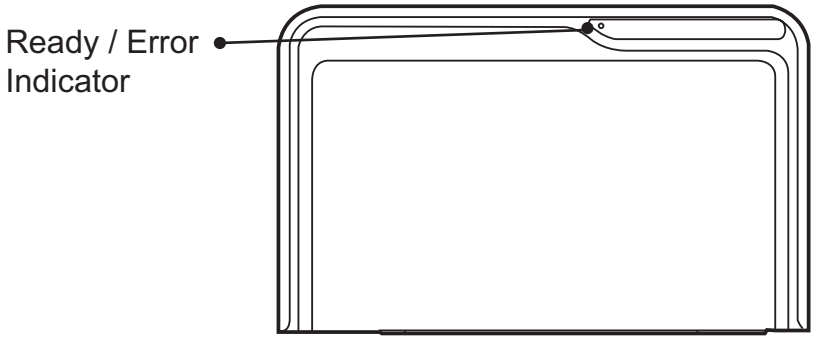

Rear

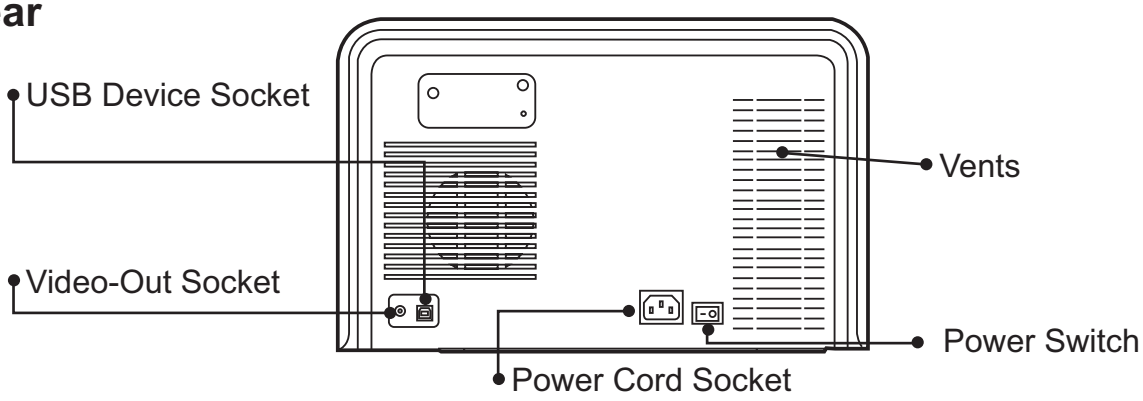


Sides

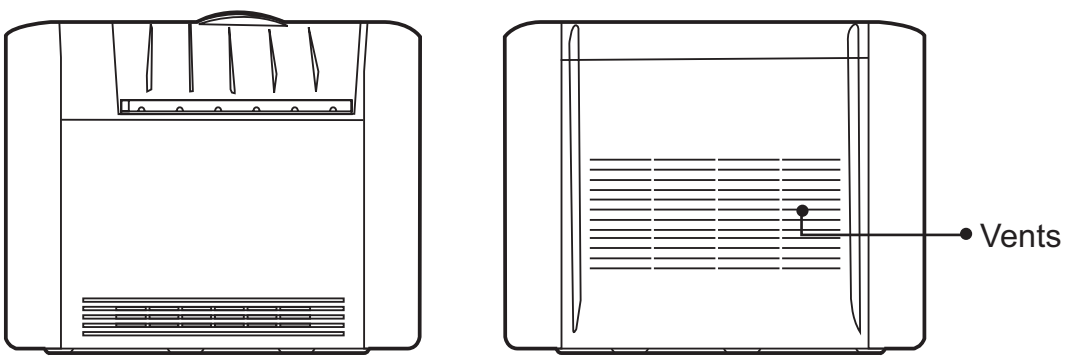


Making Printer Ready to Print

Installing the ribbon cartridge

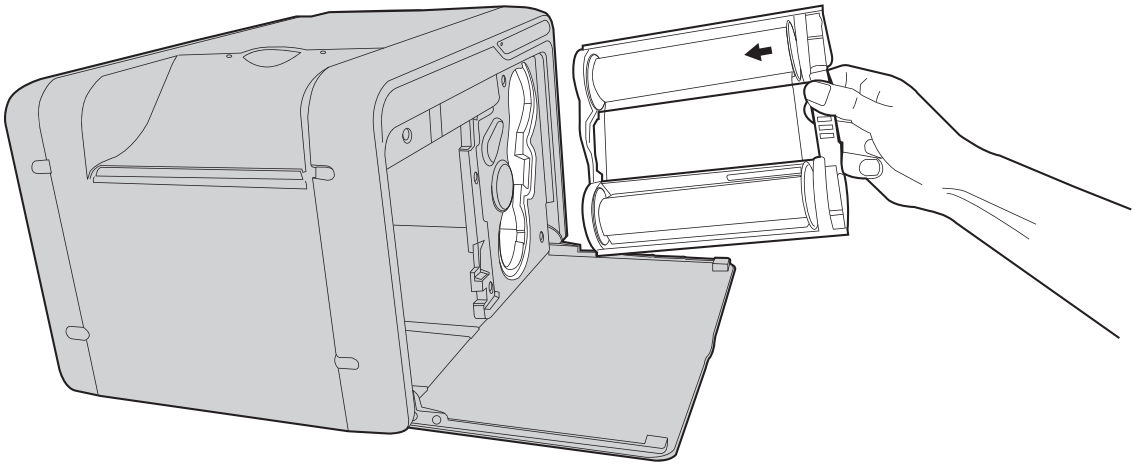

Installing the paper box

a. Assembling the paper roll and flange

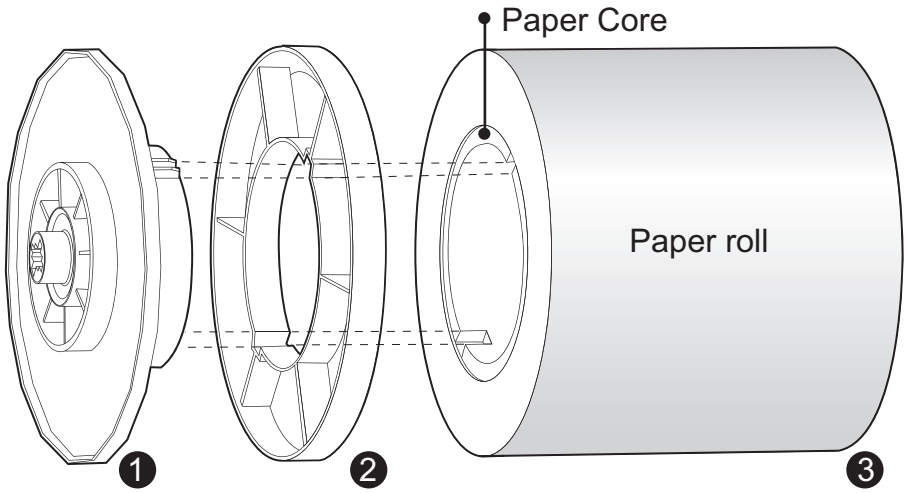


1 = Flange (Two colors)

2 = Spacer

(Necessary only on 5x7 size paper roll installation)

3 = Paper roll


Upon assembly, please install the spacers in the paper flange (green) and paper flange (orange) first when using 5x7 size paper roll. The two spacers are identical.
Match the notch of paper flange and the notch of paper core. Note that one side of paper core has 2 notches, and the other has 3 notches.

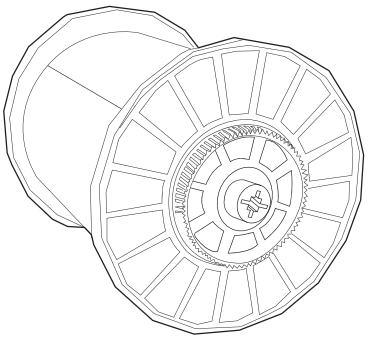

(After assembly)

Making Printer Ready to Print


b. Putting the paper roll into paper box

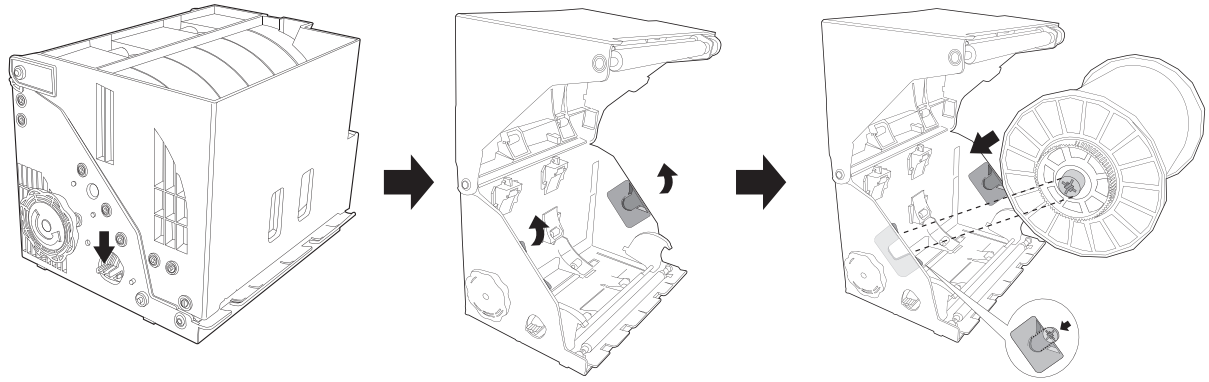

Flip the paper box as shown, and then press the box button to open the box.

(Open the box)

Place the paper roll into the box as shown, make sure the color of paper roll flange is in consistency with same color of flange holder inside the box.

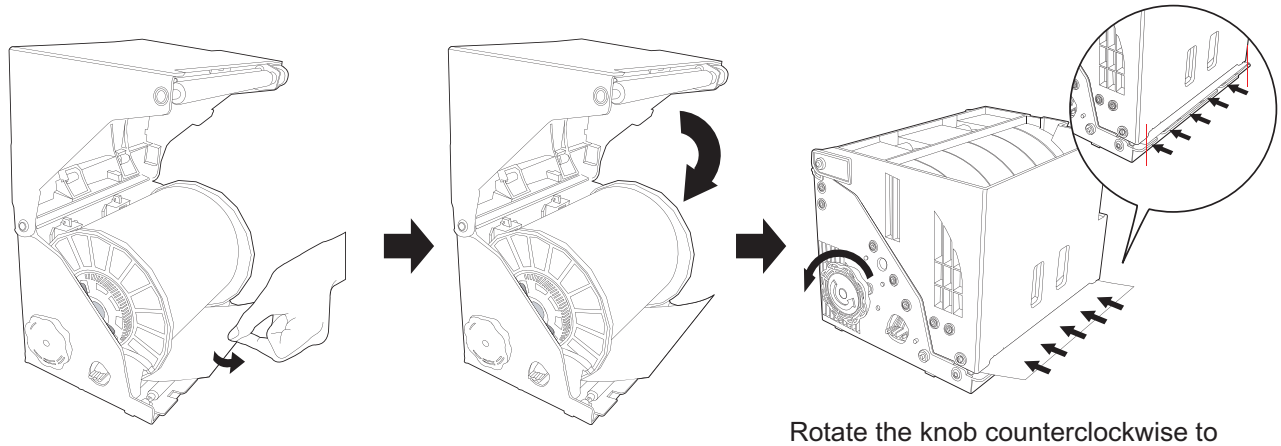


Remove the seal from the paper after setting the paper roll, and then pull out the paper so that it comes out across the box edge.


Close the box

Rotate the knob counterclockwise to draw back protruding paper until it's straight and aligns with paper box bottom edge as shown.

c. Powering up the printer

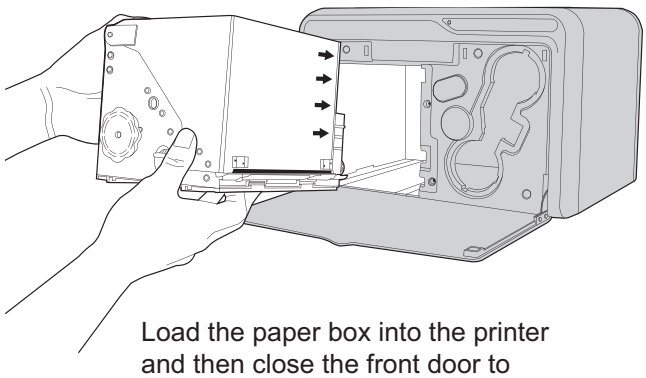

Load the paper box into the printer and then close the front door to finalize the installation.

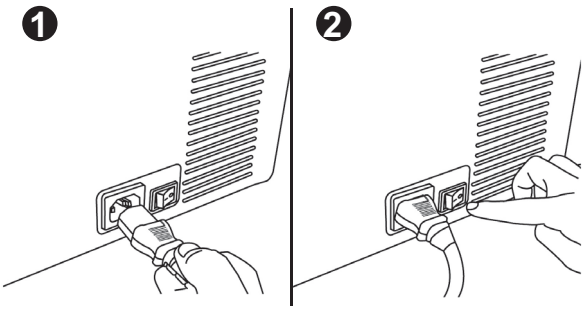

After the printer is turned on, your printer is ready for use.

PC-Link Printing

Before working on photo finishing, please make sure you have followed the User's Manual booklet supplied for printer installation. Please pay particular attention to the safety instructions.


The printer driver enables you to do photo printing through a computer. Please see below for the system requirement of a PC.

System requirement

- Intel Pentium or compatible PC
- Windows 2000/ XP (32/64 bit)/ Vista (32/64 bit)/ Win7 (32/64 bit), Mac OS X 10.2 to 10.6
- 128MB RAM or higher
- 100MB or more free hard disk space
- CD-ROM or DVD-ROM drive

Connecting the printer to a PC


Please connect the printer to your PC via supplied USB cable. If it is missing in the package, please reach the local dealer or contact Hiti customer service center nearest to you.

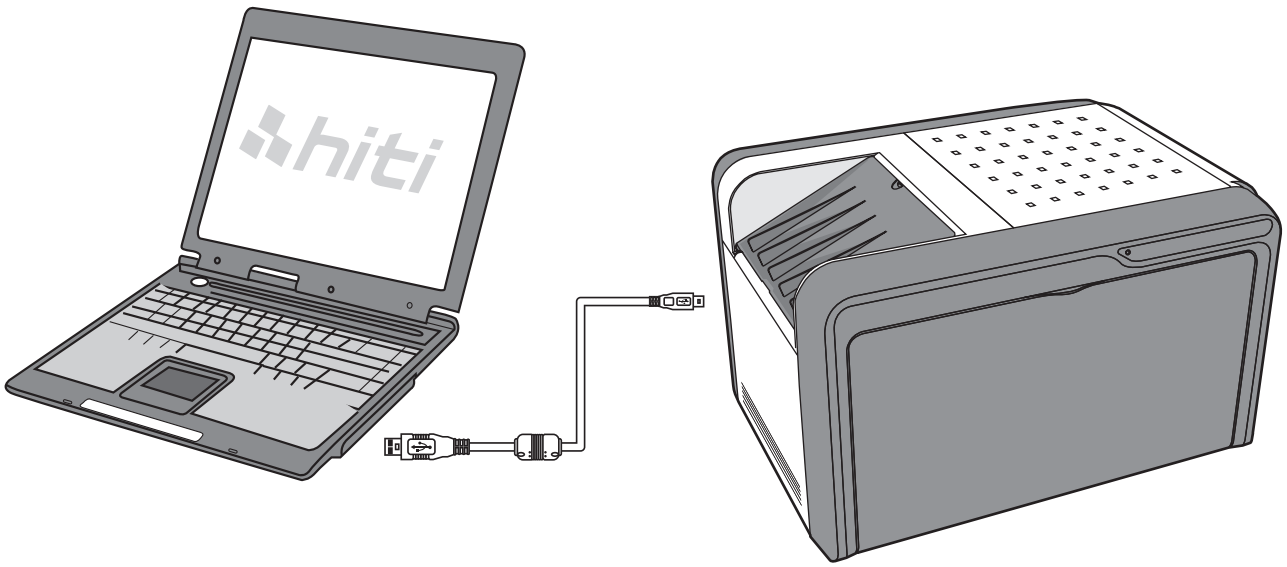


PC-Link Printing

Installing the printer driver

1. Make sure the printer is turned off
2. Insert the CD into CD/DVD ROM, and then the computer will automatically start the installation. If the installation does not start automatically, please run the **autorun.exe** file in the driver CD.

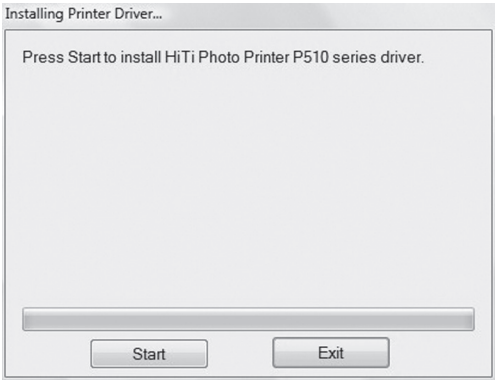


Press [Start] for driver installation

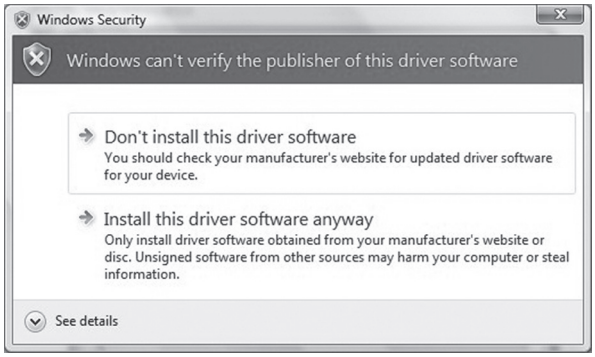

You might be informed the security and asked for installation. Please select **"Install this driver anyway"** to continue.

3. If the driver is successfully installed, you got to turn on the printer. After turning on, your PC will find new hardware and ask for your advice.

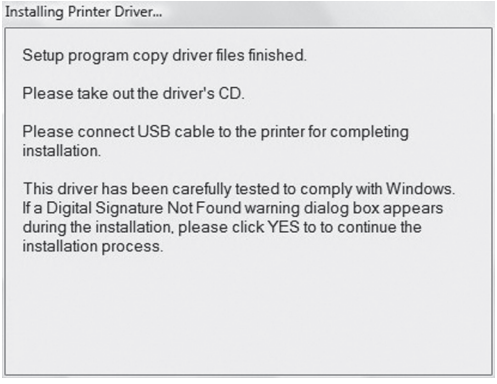

Installation complete, please turn on the printer



New hardware found, please select **"Locate and install driver software"** to finalize the driver installation

Photo Finishing By PC-Link Printing

Software: Windows Photo Gallery


Step 1: Select an image and use Windows Photo Gallery to browse



Step 2: Click the icon [ ] and choose “Print”



Step 3: Print pictures

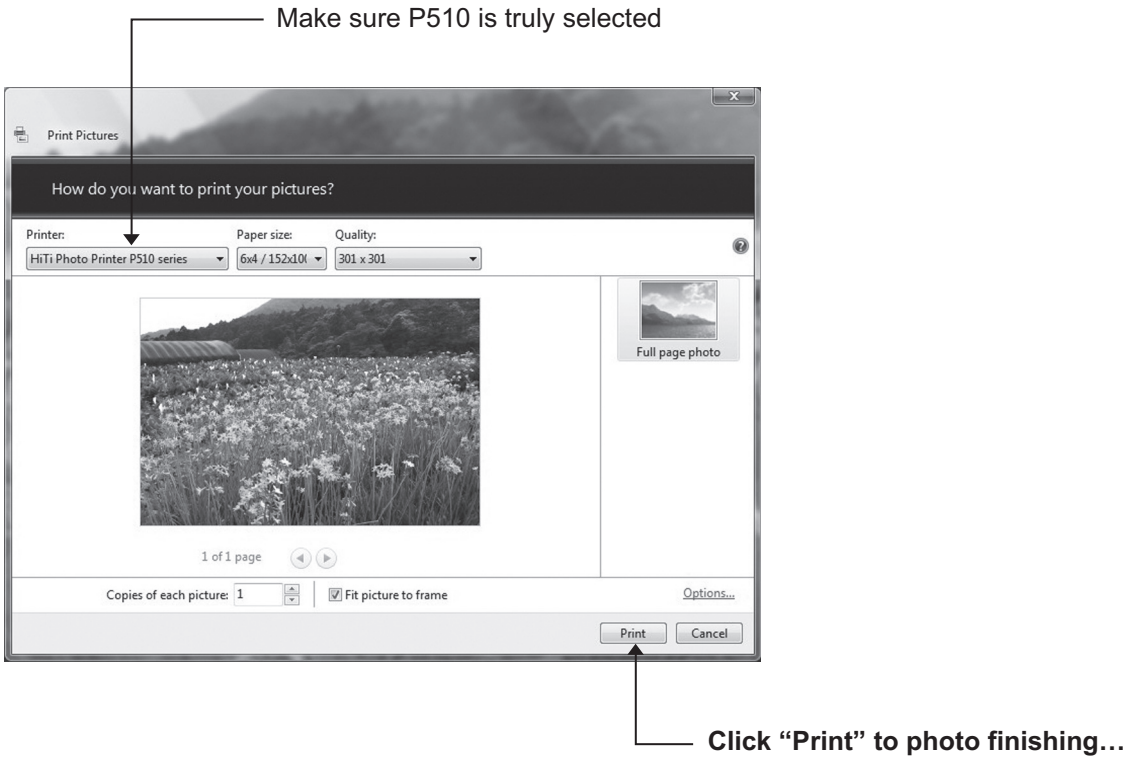

Specification

Please note that specification of P510L is subject to change without notice.

Item	Description
Resolution	300 x 300 dpi
Max Prints Size	6x9 borderless
Printing Speed (6x4)	Approx 12 sec
Capacity	4x6: 330 images
	5x7: 190 images
	6x9: 150 images
Printing Category	4x6 / 5x7 / 6x8, and 6x9. All sizes “2-UP” supported
Driver	Windows 2000/XP (32/64-bit)/Vista (32/64-bit)/Win 7 (32/64-bit) Mac OS X v10.2 to v10.6
Power Requirement	AC 100 V~240 V, 50 / 60 Hz
Operation Condition	10°C~35°C / 50°F~95°F; 20~75% non-condensing
Dimension & Weight	392x298x245mm, 30lbs (consumables excluded)

*Video-out: It is relatively appropriate for use of Passport/ID photo editing. Due to limited resolution, the display quality may vary accordingly.

© 2011 Hiti Digital, Inc.
All rights reserved, Hiti.
http://www.hiti.com
P/N:39.D1700.001